

TRICLEDCOM F3 / F3-T / F3-L KNIGHT RIDER LED WITH FOB REMOTE

Contents of your package
1 Special length knight rider LED
1 Remote FOB
1 Alcohol
1 Primer



Open front trunk, remove the top service cover by pulling up on the rubber grommet. Remove the (4) push pins on each corner of the trunk tub, pull up and remove the trunk.



Two ways you can connect the knight rider LED. First option is direct to the battery and the other is through the ACC wire which will only be on when the bike is running. For ACC wiring, look on the right of the battery box and locate the factory harness labeled "customer accessory circuit". Peel back the protective covering and it will reveal 2 loose open wire. Connect the knight rider LED here.



Clean the front lip section where the LED will be adhered to. Apply multiple coats of 3M primer and let dry. Use masking tape and hold the center section while the adhesive cures against the front hood.

See above blue illustration for masking tape placement. Place tape across the knight rider led and tape it secure to the trunk inside and to the front bottom. Allow it to stay for about 1 hr before pulling the tape off.



On the left side of the trunk lip there is a plastic holder with a hole. Using a side cutter cut the top section to slot (cut straight line down to the hole opening). You can slide the wire through the top as shown above.



Disconnect the harness module from the Knight rider led by unscrewing the cap and pulling it apart as shown.



Thank you for your purchase, any questions please contact us at sales@TricLED.com



Run the Knight rider LED through the outside of the hinge and insert into hole opening by the hinge. Pull the wire out from the bottom side.



Once the wire is pulled out from the bottom side, put some Di-Electric grease on the inside connector. Line up the pins and insert the module side into the knight rider LED wire. Route the wire along the edge and zip tie it on the back wall where all the wiring harness is located.

REMOTE FUNCTION



- (A) BUTTON TURNS THE KNIGHT RIDER LED (OFF)
- (B) BUTTON TURNS (ON) THE LED, EACH CONSECUTIVE PUSH OF (B) BUTTON SCROLLS THROUGH ALL THE SOLID COLORS THEN THE KNIGHT RIDER MODE.
- (C) NOT USED
- (D) CHANGES THE SPEED OF THE KNIGHT RIDER LED. IT WILL GO FROM SLOW TO FAST AND THEN CYCLES OVER AGAIN.

THE REMOTE FUNCTION ALWAYS REMEMBERS THE LAST SETTING WHEN YOU TURN ON/OFF THE UNIT.

PLEASE KEEP REMOTE IN A SAFE AND DRY PLACE. KEEPING IT IN A SMALL PLASTIC BAG HELPS INSURE MAXIMUM DURABILITY. THANK YOU.