

# RYKER "THE MISSING" PARKING BRAKE LOCK



Contents  
Lock, 2 screws, 2 keys.



Locate the panel with this graphic on the left side.



Remove the air box outer cover.



Use torx 20 to remove these 2 screws.



Pul cover from the top.



Slide cover forward to remove.



Locate the two snap lock below the air box.



Push down to release both clips and remove cover.




Remove box.



Use a torx 30 and remove bolt from bottom of lock cover.



Lift cover from the bottom slightly and drill approximately a 1/2" hole for key opening.

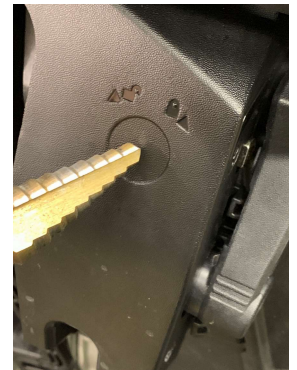

Drilled key slot.



Apply loctite to the two mounting bolts.



Insert the lock with key hole facing out and tighten the two bolts to the lock using 8mm socket.



Test the lock, move the lever slightly to line up the lock until you're able to turn the key fully to the right. When lock is engaged it will prevent the lever to be unlocked.