



Nelson & Nelson Mfg.
2200 Fowler Ave, Suite D
Jonesboro AR 72401
870-268-6393 : Cell 219-1019

Installation Instructions 10-1-19

Model RYK-BRKL

Ryker Aluminum Brake Lever Assembly

Steps needed to install your Brake Lever

- 1.- Remove the Air Filter Cover below as shown on the right-hand photo. Unlatch the Cover from below.
Simply lift off that panel.



- 2.- Remove the bolt as shown using a T-30 Torx wrench.



- 3.- Then remove the T-30 Torx screw that holds the cable to the Brake Lever as shown below.



4.-Then lift the cover and using an 8mm socket. Remove the 4 bolts holding the plastic cover over the Brake Lever Shaft. We removed the first bolt in the photo. Then remove the Shaft Cover as shown below.



5.- Then remove the Brake Lever from its cradle.



6.-Next install the new Brake Lever Assembly in reverse of how you disassembled the original. Then reinstall the shaft cover. Install the 4 bolts but do not tighten them at this point.



7.-Reattached the brake cable which may require you pull it downward to place over shaft.



8.-Once the cable is reconnected then tighten down all four bolts. Then lower the cover and reinstall the T-30 screw



9.-Reinstall the Air filter cover



10.-Your completed new Brake Lever is installed!



We thank you for purchasing one of our New Ryker Products. We know today the needs for Quality Accessories and we have solved that demand with a stylish Products that compliments the design of your Ryker®!

spyderextras.com