

Transmission Dust Cover Instruction Sheet

Parts List:

Qty 1 Transmission Dust cover
Qty 1 M6 x 1.0 Button Head Allen Bolt
Qty 1 Instruction Sheet

Technical Support:

Phone: 715-369-3660

Email: Andy@AlphaPowersport.com

Step 1

Locate the open portion of the transmission bell housing on the passenger side of the engine. You will have to look under the exhaust manifold. It will look like Fig. 1 Shown to the right.



Fig. 1

Step 2

Remove the Alpha Powersport transmission dust cover from the packaging and place it in the opening. Be sure to slide it in and behind the space between the engine and the bell housing as shown in Fig 2.

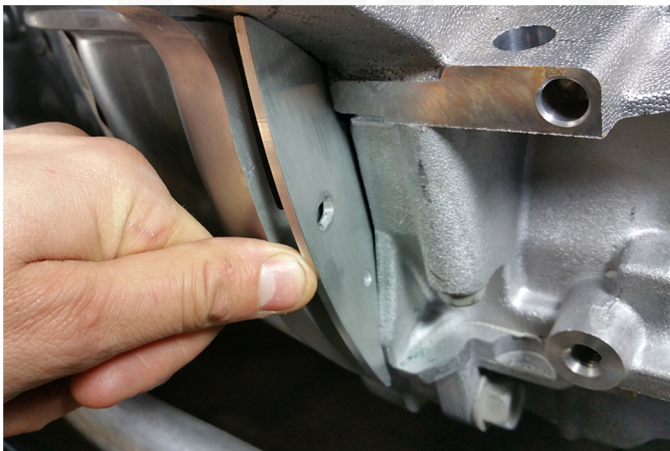


Fig. 2

Step 3

Place the stainless steel bolt included in the kit in the hole and snug with a 4mm allen key or socket. Check to make sure the edge of the cover is lined up with the edge of the transmission. Then fully tighten the bolt. Be sure not to overtighten and strip the bolt.



Fig. 3