


2015-2016 Slingshot – Installation Instruction

Please use the shorter nut and bolts

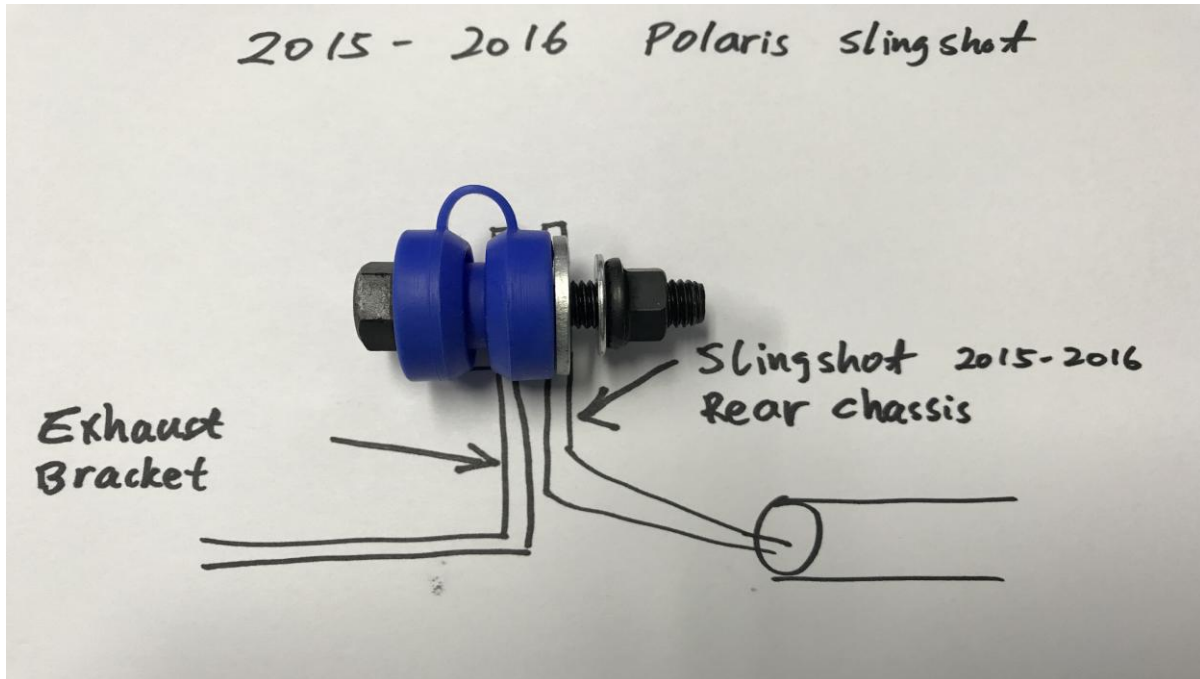

Due to the changes in the 2017-2018 Slingshot (the plate design vs the tube design in attached pictures), in order to install the 1320 Performance Rear side and Rear center exit exhaust system please use the longer bolt supplied with the kit on the rear bracket mount next to the tires.

1. Remove the red plug from the tube.
2. Only one side of the tube has been drilled from the factory. You will need to drill the hole through on the opposite side. The hole is approximately 10-12mm in size. You can use a ½ inch drill bit.

3. Use the longer bolt and nylon locking nut to mount the exhaust bracket. Please check the picture below for instruction.



TUBE DESIGN

