



**HYPNOTIC CONCEPTS**

## Grill Insert For the CAN-AM SPYDER 2014-2019 R/T Installation Instructions

**\*\*Please read thoroughly before proceeding with installation in order to ensure proper fit & functionality\*\***

### **KIT LIST:**

(2) grill inserts

### **HARDWARE**

(8) Screws

(4) magnetic brackets



**STEP 1.**

**STEP 1.** Before beginning the installation, ensure that the front of the fairing is clean and free of all dirt and oil. Next you will need to test fit each grill insert to determine the mounting points for each magnetic mounting bracket that you will be using.


**STEP 2.** Center one magnetic mounting bracket on top and one on bottom of the fairing intake by aligning the edge where the fairing and the actual OEM intake housing meet (depicted in red in the picture below). The actual magnet should be facing towards you.

Clean the spots with the alcohol pads provided then wipe the area with the adhesive promoter provided.

**BEFORE PROCEEDING, VERIFY THE BRACKETS' LOCATION ONE MORE TIME PER SIDE!**

Peel off the red protective tape on each bracket and place stick them to each determined mounting point.

**STEP 2.**

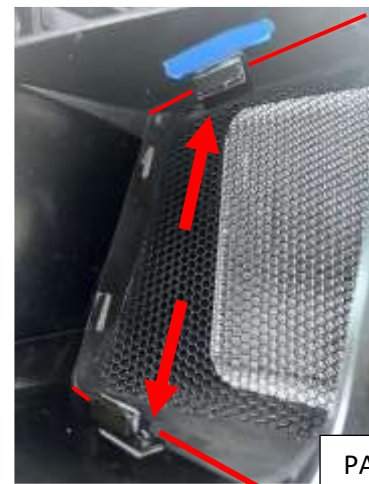

PAGE 1 OF 2

Screws have been provided as an additional mounting option.



**STEP 3.** Install each grill by inserting the top of the grill in towards the intake until the top magnet catches the grill then lower the grill into position.

Ensure the grills are secure to the magnets.

A pick tool has been provided to allow you to remove each grill for cleaning by inserting the pick tool tip through one of the openings towards the bottom of each grill insert and gently pulling towards you.

**Should a magnet come loose from the bracket for any reason, simply clean the bracket and magnet with alcohol and apply a small dot of super glue or epoxy on the bracket and reattach the magnet. Enjoy!**

