


2020+ CAN AM SPYDER RT AFTERBURNERZ

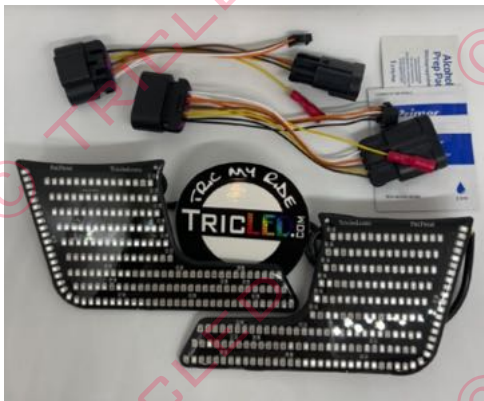


Contents
(2)Specially designed LED boards
(2)OEM harness
2 alcohol pads and primer



Open and lift front seat section



Release passenger seat tab and remove rear seat

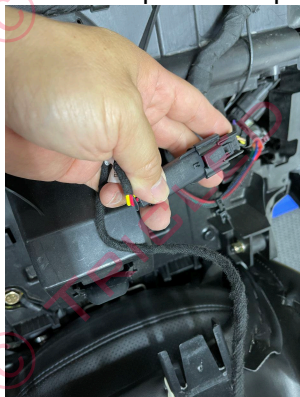

Release rear seat sensor connector



If you have top trunk tilt forward.
If you have top lid, remove



Remove plastic screw holding the grab bar cover



Remove plastic screw holding the grab bar cover



Remove cover and open last screw underneath towards the front



Release the door shock



Unscrew and remove push pins



Unscrew and remove push pins



Unscrew and remove push pins



Unscrew and remove push pins



For left side remove factory antenna.



Move panel aside

2020+ CAN AM SPYDER RT AFTERBURNERZ



The 2 red arrows show where the afterburners will be installed.

It functions as a red running light, red brake lights and yellow sequential turn signals for each side



Test fit the new LED into position




Using a cone step bit, drill a hole large enough for the wire connector to go through



Clean the surface with alcohol and apply primer.



Feed the wire through the hole where it was drilled. After inserting the wire, feed it towards the outside and up to the top. Peel the tape cover and adhere

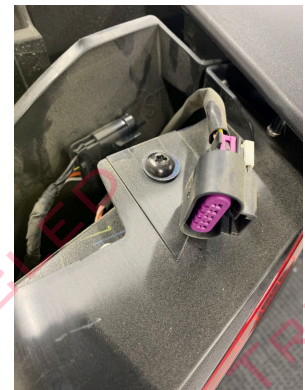

Disconnect the harness from the lower factory taillight



Attach new OEM harness inline to rear tail-light and attach wire from LED to the connector.

Yellow wire in arrow above is not use for this application

Once all connections made, turn on the key to acc position and test your run/brake and turn signal. Repeat for other side

