


# 2020 Spyder RT Side Saddlebag Red LED w/ Reflector by [TricLED.com](http://TricLED.com)



- Contents**
- 2 LED reflector
  - 2 OEM harness
  - Alcohol pad, primer
  - 4 male bullet




Refer to owners manual to remove top case for limited or rear cover for RT models. Remove passenger seat and follow instructions.

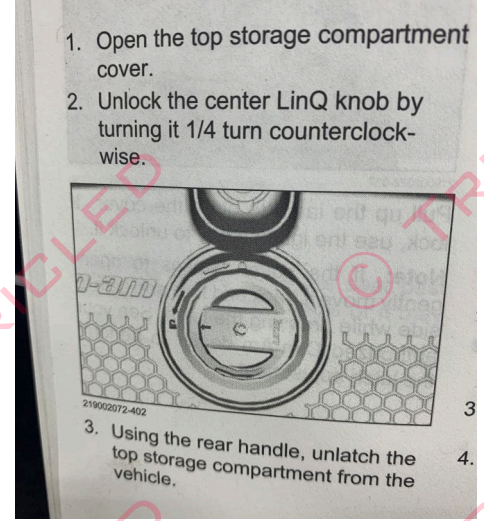

- 219002072-400
- Lift the storage compartment slightly and slide your hand underneath to disconnect the connector located near the passenger seat.
  - Pull the storage compartment rearwards and remove it from the vehicle.




Remove screws marked in red. There are combination of push pin style screws, metal screws and 1 screw with nut on back side.

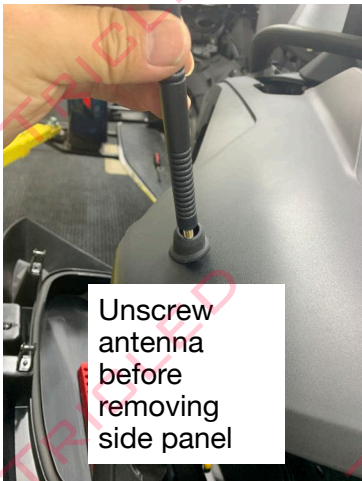


Unscrew antenna before removing side panel



Remove saddle bag door shock

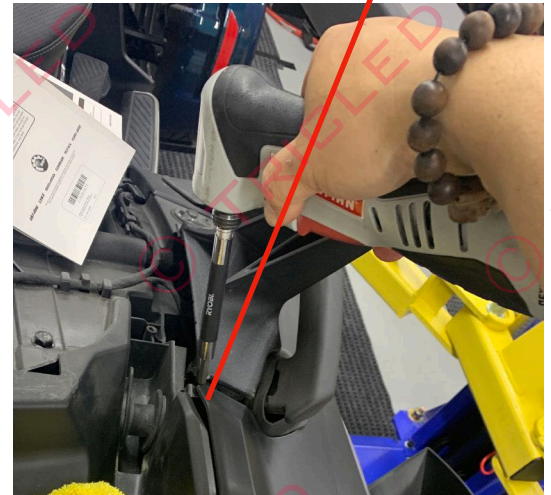

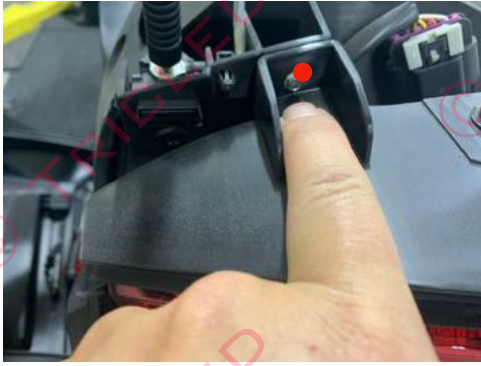

After removing all the bolts and fastener, pull back the rear panel out a couple of inches, locate factory OEM harness behind each taillights. See next picture.



Disconnect factory taillight harness.



Connect the supplied OEM harness.



Hold up the side saddle bag doors, heat and remove plastic reflector.



Once removed, position the red LED reflector, note where the wire exit and drill through. Clean surface with alcohol pad, let dry and apply primer, and let dry again before adhering the red LED.



Feed the wire through the inside of saddlebag. Use loom to cover up the wire as it enters the side of the body panel.



Feed the wire from side of saddle bag and up towards the top.




Once the saddle bag wire is up at the top, strip red and black wire ends then crimp male bullet to both.

Connect red wire from saddlebag LED to the orange female wire bullet on the supplied OEM harness.

Connect black from LED to black on the female bullet OEM harness

Red to orange  
Black to black

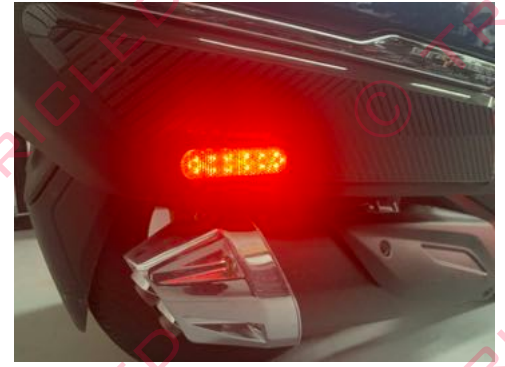

Test your LED.