



2020 Spyder RT/ RT Limited USA Flag with bracket by [TricLED.com](http://TricLED.com)

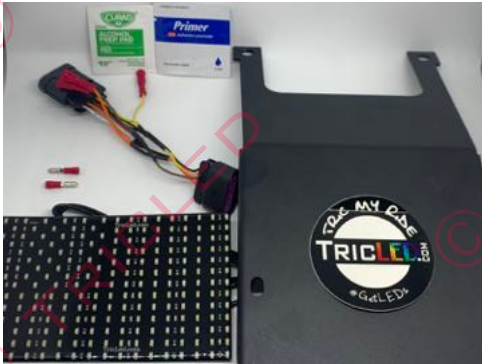


Contents

- 1 Bracket
- 1 OEM harness
- Alcohol pad, primer
- 2 male bullet

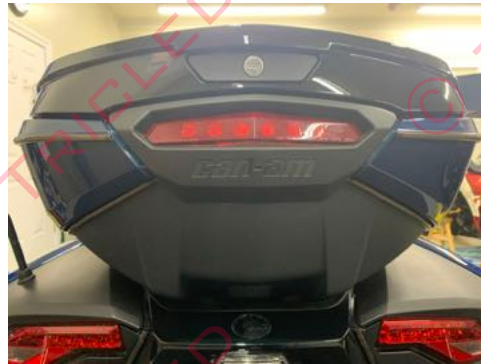


Refer to owners manual to remove top case for limited or rear cover for RT models. Remove passenger seat and follow instructions.

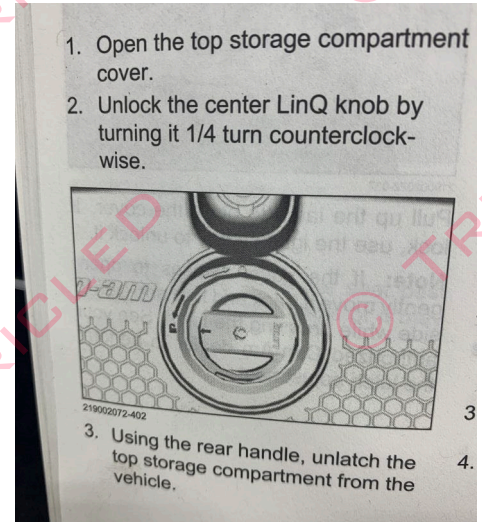

4. Lift the storage compartment slightly and slide your hand underneath to disconnect the connector located near the passenger seat.
5. Pull the storage compartment rearwards and remove it from the vehicle.



Remove screws marked in red. There are combination of push pin style screws, metal screws and 1 screw with nut on back side.

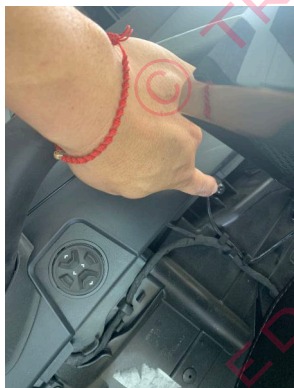

Remove the panel under the side grab rail using a torx-20 bit, this will reveal the additional bolts underneath to remove the side saddlebag. The case will not need to be removed only pulled apart with enough space to get to the factory tail light harness and to pull the flag wire up.



Pull apart the side case enough to reach the factory harness




Disconnect factory taillight harness.




Connect the supplied OEM harness.



Remove license plate and test fit bracket

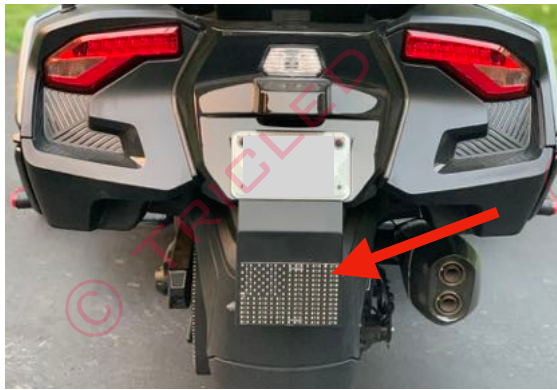

The Flag will sit under the plate on the lower part of the bracket. At this time clean the bracket surface with alcohol, let dry and apply primer. Center the flag and pass the wire through the hole on the bracket

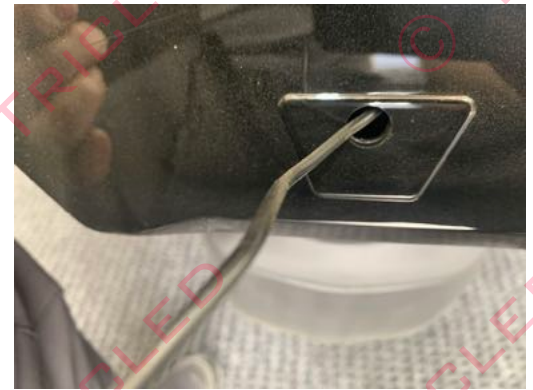

Drill a small hole enough to pass the flag wire through the rear fender.



Mount the plate back, be sure to use a screw long enough to secure the bracket and plate tight to the fender.



Using a reach tool, grab the flag wire and pull up to this area of the harness.

Crimp the supplied red bullet to the flag. Red is positive, black ground



Connect

Red bullet from flag to orange on harness  
Black to black on harness  
Disregard all other wires as they are not used for this application

Turn the key to the on position and check your flag