

Copyright © 2017 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-182

KEY COVER

10/3/2017

FITMENT: CAN-AM SPYDER, 2008-NEWER

TOOLS NEEDED: SUPER GLUE

PAPER TOWEL

SANDPAPER/FILE

**PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.****ESTIMATED INSTALLATION TIME: 5 TO 10 MIN.****INSTALLATION:**

1. SNAP THE FRONT AND BACK TOGETHER WITH THE KEY AS SHOWN IN FIG. 3.
2. INSERT KEY INTO THE IGNITION SWITCH.
3. GRIPPING THE KEY (*NOT THE KEY COVER*) PUSH THE KEY IN AND TURN IT TO RELEASE THE FRONT TRUNK. DO NOT FORCE IT IF IT DOES NOT TURN FREELY. IF IT TURNS FREELY SKIP THE NEXT STEP.
4. REMOVE THE KEY AND USING SANDPAPER OR A FILE REMOVE A SMALL AMOUNT OF PLASTIC IN THE AREA SHOWN IN FIG. 1. UNTIL THE FRONT TRUNK OPENS FREELY.
5. SEPARATE THE TWO HALVES OF THE KEY COVER AND LAY THEM ON A CLEAN PAPER TOWEL.
6. APPLY FOUR SMALL DROPS OF SUPER GLUE TO THE INSIDE OF THE FRONT HALF AS SHOWN IN FIG. 2. (*NOTE: THE FRONT IS THE THINNER HALF*)
7. SNAP THE FRONT AND BACK TOGETHER AS SHOWN IN FIG. 3.

**WARNING**

KEEP THE NUMBER OF KEYS AND FOBs TO A MINIMUM ON THIS KEY RING. EXCESSIVE WEIGHT MAY CAUSE DAMAGE TO IGNITION.

ALWAYS GRIP THE KEY WHEN OPENING SEAT AND TRUNK

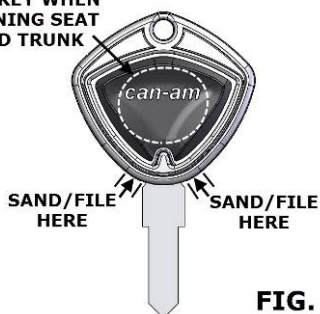


FIG. 1

4 DROPS OF SUPER GLUE



FRONT (THIN)

FIG. 2



BACK (THICK)



FIG. 3

Copyright © 2017 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-182

KEY COVER

10/3/2017

FITMENT: CAN-AM SPYDER, 2008-NEWER

TOOLS NEEDED: SUPER GLUE

PAPER TOWEL

SANDPAPER/FILE

**PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.****ESTIMATED INSTALLATION TIME: 5 TO 10 MIN.****INSTALLATION:**

1. SNAP THE FRONT AND BACK TOGETHER WITH THE KEY AS SHOWN IN FIG. 3.
2. INSERT KEY INTO THE IGNITION SWITCH.
3. GRIPPING THE KEY (*NOT THE KEY COVER*) PUSH THE KEY IN AND TURN IT TO RELEASE THE FRONT TRUNK. DO NOT FORCE IT IF IT DOES NOT TURN FREELY. IF IT TURNS FREELY SKIP THE NEXT STEP.
4. REMOVE THE KEY AND USING SANDPAPER OR A FILE REMOVE A SMALL AMOUNT OF PLASTIC IN THE AREA SHOWN IN FIG. 1. UNTIL THE FRONT TRUNK OPENS FREELY.
5. SEPARATE THE TWO HALVES OF THE KEY COVER AND LAY THEM ON A CLEAN PAPER TOWEL.
6. APPLY FOUR SMALL DROPS OF SUPER GLUE TO THE INSIDE OF THE FRONT HALF AS SHOWN IN FIG. 2. (*NOTE: THE FRONT IS THE THINNER HALF*)
7. SNAP THE FRONT AND BACK TOGETHER AS SHOWN IN FIG. 3.

**WARNING**

KEEP THE NUMBER OF KEYS AND FOBs TO A MINIMUM ON THIS KEY RING. EXCESSIVE WEIGHT MAY CAUSE DAMAGE TO IGNITION.

ALWAYS GRIP THE KEY WHEN OPENING SEAT AND TRUNK

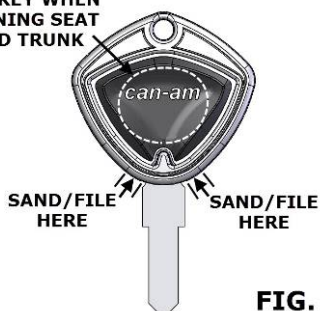


FIG. 1

4 DROPS OF SUPER GLUE



FRONT (THIN)

FIG. 2



BACK (THICK)



FIG. 3