



# INSTALLATION INSTRUCTIONS

**Embark on Your Journey with Confidence.**

These instructions are for both riders and dealers – written as a step-by-step guide with an eye for detail, just like our products. It’s all part of your experience with Show Chrome, and we take that seriously.

Please review the instructions before diving in, and if things get uncomfortable, don’t hesitate. Reach out to us. We're here to help and offer direct, human customer service based in Rice Lake, WI, USA – every time at 888-244-2453. Ride safely, and ride often.

**Final Product Installed:**




<b>Product: SEAT SHOCK</b>					
<b>Part # 41-268</b>					
<i>INSTALLATION TIME: 10 TO 15 MIN</i>			<b>Fitment: CAN-AM SPYDER RT 2010-2019</b>		
<b>TOOLS NEEDED:</b>	SMALL FLAT HEAD SCREWDRIVER				
<b>INCLUDED:</b>	SEAT SHOCK				

## INSTRUCTIONS

1. Release the driver seat latch by pushing in on the key and turning it clockwise. Lift up the front of the driver seat to open it.
2. Locate the stock OEM seat shock, seen in **FIG. 1**.
3. Support the seat and proceed to use a small flat screwdriver to release (prying straight out) the metal clip securing the bottom of the stock OEM seat shock. (**FIG. 1**).
4. While continuing to support the seat, release the metal clip securing the top of the stock OEM seat shock using the same small flat head screwdriver used in step 3. (**FIG. 1**).
5. Connect the bottom end of the new TRUNK SHOCK to the shock mount by pressing firmly until it snaps completely onto the bottom mount post.
6. Connect the top end of the new TRUNK SHOCK to the shock mount by pressing firmly until it snaps completely onto the top mount post.



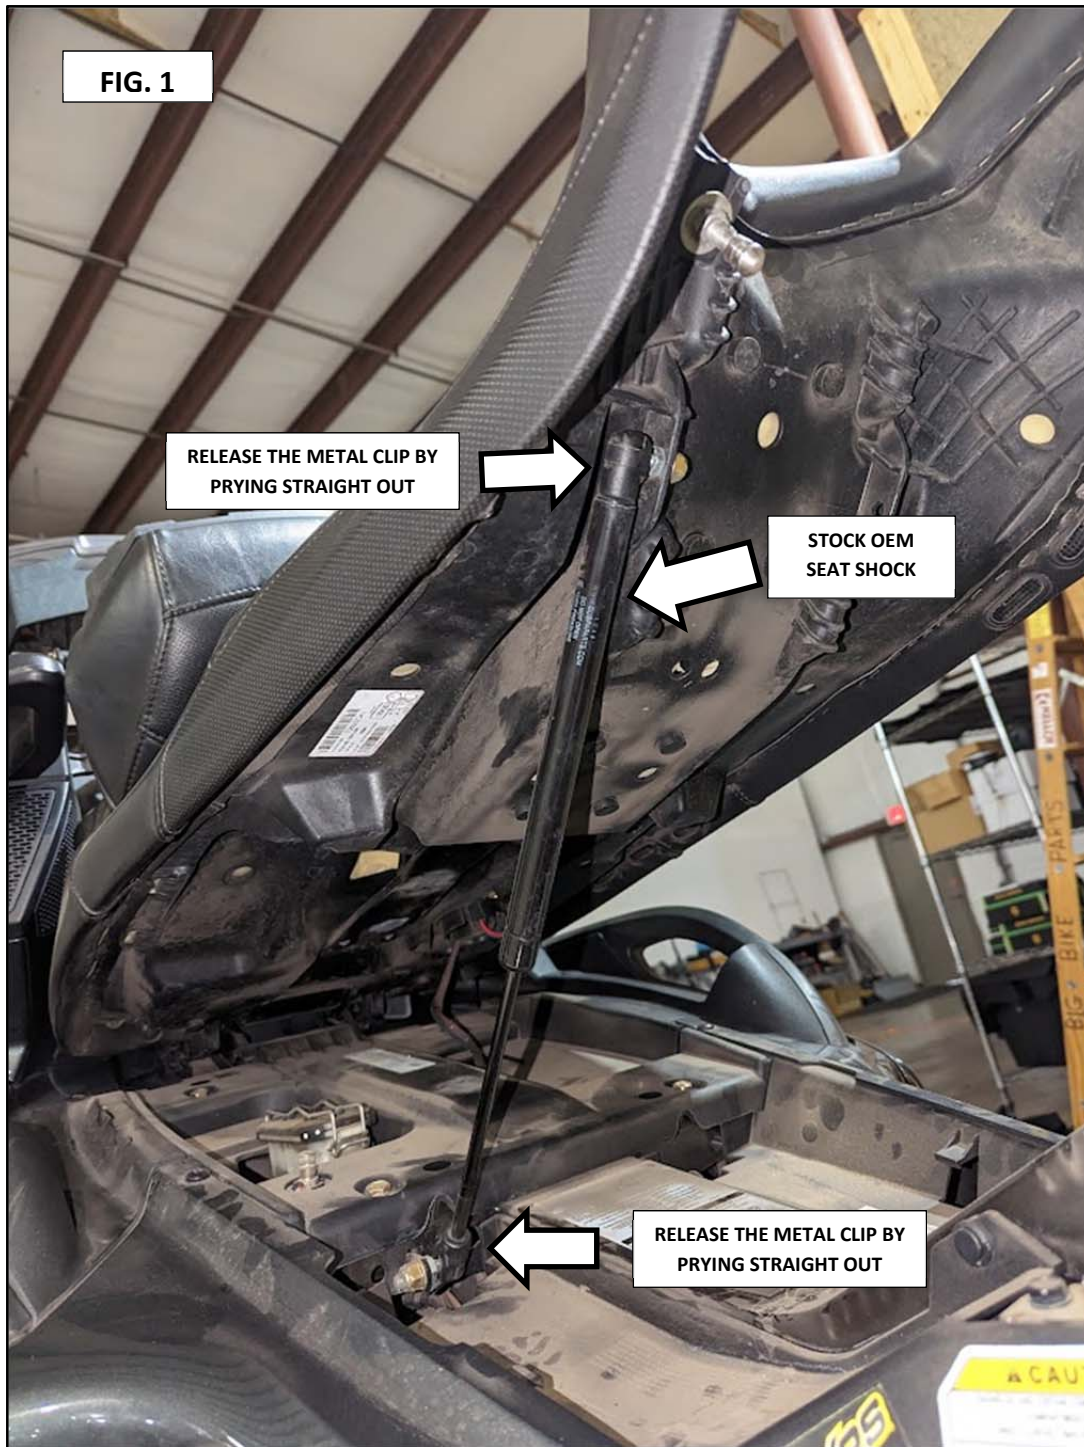

**NOTICE**

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.