

**SHOW CHROME®**

Copyright© 2023 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

**INSTALLATION INSTRUCTIONS**

PART NO. 44-108R

DESCRIPTION: EXTENDED OIL DIPSTICK

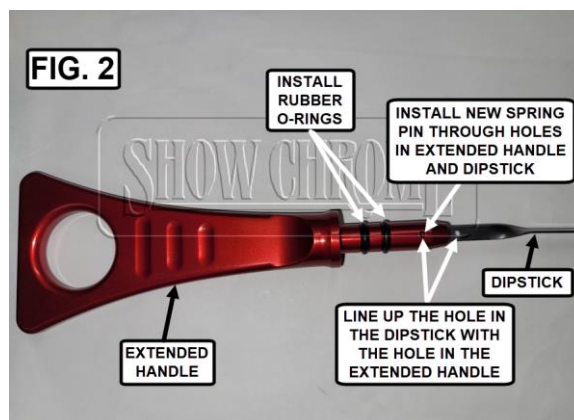
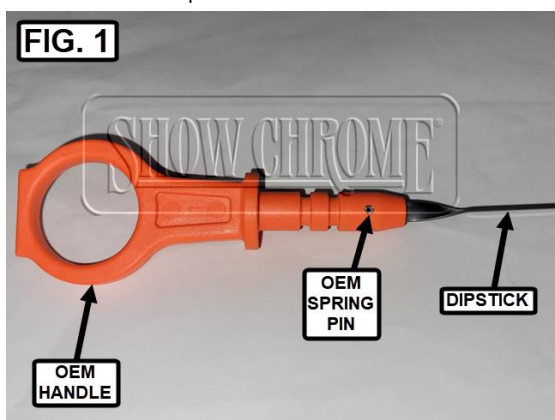
ESTIMATED INSTALLATION TIME: 15 TO 30 MIN

FITMENT: POLARIS SLINGSHOT 2020-NEWER

TOOLS NEEDED:	CLEAN RAG	SMALL NAIL OR PUNCH			
INCLUDED:	EXTENDED HANDLE	2 MM WIDE X 6 MM ID RUBBER O-RING (2X)	2MM COILED SPRING PIN		
EXTRA ITEMS (NOT NEEDED):	N/A				

**PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.****INSTALLATION:**

1. Open the hood of the slingshot.
2. Remove the OEM oil dipstick from the vehicle by pulling straight up. Wipe clean and set on a clean surface.
3. Use a small nail or punch to carefully push the OEM spring pin out of the OEM handle (FIG. 1). This will not be reused.
4. Remove the OEM handle from the dipstick by sliding straight off (FIG. 1). This will not be reused.
5. Install the two rubber O-rings supplied in the kit on the grooves of the Extended Handle (FIG. 2).
6. Slide the Extended Handle onto the dipstick lining up the holes for the spring pin to go through (FIG. 2).
7. Carefully start installing the new spring pin making sure it lines straight up with the hole in the Extended Handle (FIG. 2). **Forcing this pin will damage it and make it not usable.**
8. Once the spring pin is lined up and started in the hole of the Extended Handle, slowly push the pin through being sure it lines up with the dipstick. Use the small nail or punch to press it in until it is centered in the extended handle.
9. Reinstall the oil dipstick in the vehicle.

**NOTICE**

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.