

Installation Tips

BEFORE YOU BEGIN


1. Read these instructions and check to be sure all parts and tools are accounted for.
2. Please retain these installation instructions for future reference and parts ordering information

IMPORTANT


1. Please read the installation instructions carefully before you start.
2. If the vehicle is clean and free of other debris, it will be easy to install.
3. For your safety and to ensure a satisfactory installation, please complete all the installation steps in the order shown below.

PRODUCT INFORMATION:


[1] Skid Plate	x1
[2] M5x15 Screw	x2
[3] M5 Rubber Washer	x2
[4] M5 Nut	x2
[5] M6x20 Screw	x2
[6] M6 Metal Washer	x2
[7] M6 Panel Nut	x2

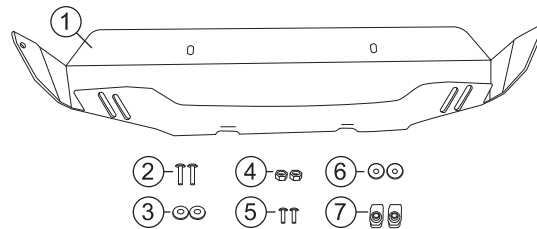


INSTALLATION TIPS:

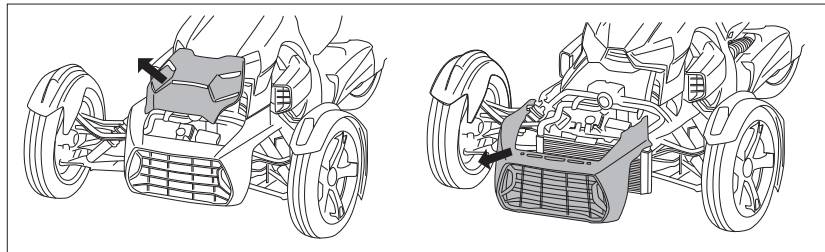


1. Refer to Ryker OPERATOR'S GUIDE, remove front hood and front fascia.

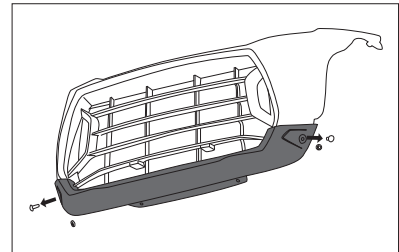


2. Remove front fascia trim by loosening original factory screws and nuts.

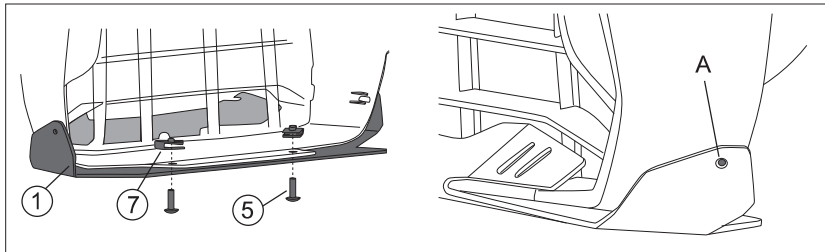


3. Temporarily install skid plate [1] to front fascia with two M6 screws [5] and M6 panel nuts [7]. Mark and drill two mounting holes A on both side of the front fascia with a 5.5 mm (7/32 in) drill bit.

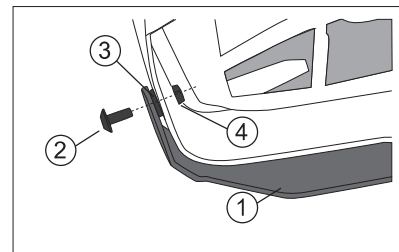

4. Install skid plate [1] on front fascia with two M5 screws [2], M5 rubber washers [3] and M5 nuts [4].

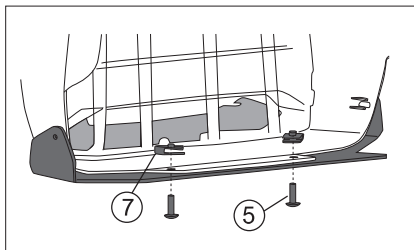

5. Remove two M6 screws [5] and M6 panel nuts [7].

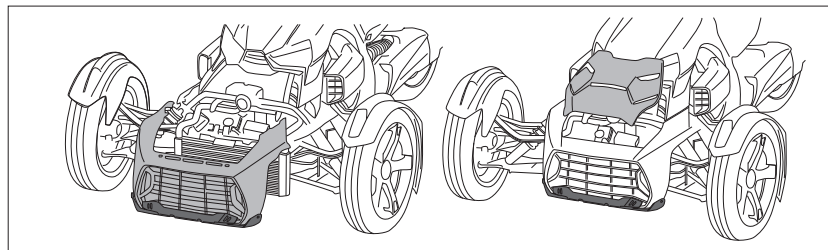

6. Refer to Ryker OPERATOR'S GUIDE, reinstall front hood and front fascia with two M6 screws [5], M6 metal washers [6] and M6 panel nuts [7].