

## License Tag Mount with LED FOR CAN-AM RYKER Installation Instructions

**\*\*Please read thoroughly before proceeding with installation in order to ensure proper fit & functionality\*\***


### TOOLS NEEDED:

T30 torx screwdriver  
T15 torx screwdriver  
Phillips screwdriver  
Plastic pry tool  
Die-electric grease

### PARTS LIST:

(1) aluminum mounting plate  
(1) 1:3 harness  
(8) mounting screws

### STEP 1.

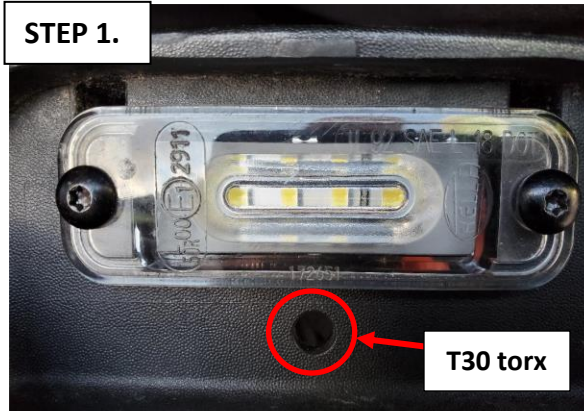

**STEP 1.** Begin by using a T30 torx screwdriver to remove the T30 torx screw located under the lip of the rear fender trim cover.



### STEP 2.

Carefully remove the rear fender trim cover by gently pulling up & towards you slowly. A small pry tool may need to be used. Do not force the cover off, doing so may damage the wire harness that connects to the OEM license plate light connectors and will not be covered under the warranty.


### STEP 2.



### STEP 3.

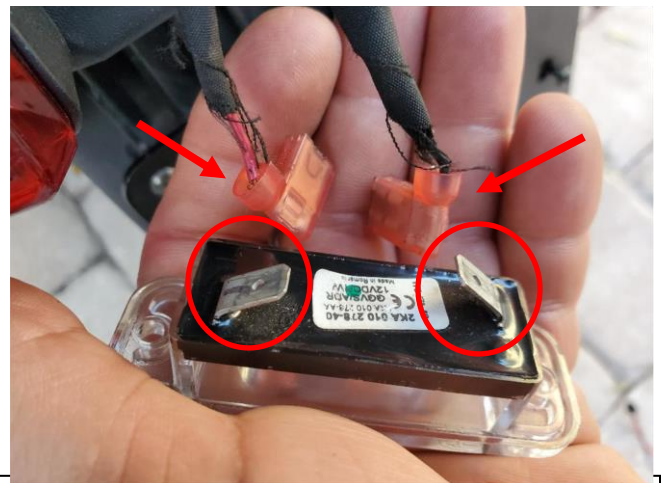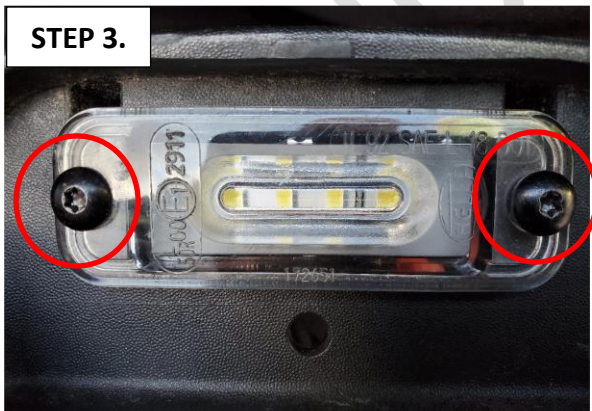

**STEP 3,** Use a T15 torx screwdriver and remove the 2 torx screws that hold the OEM license plate light in place. Remove the LED so that you have access to the OEM positive and negative female connectors attached to the LED and carefully remove them from LED.

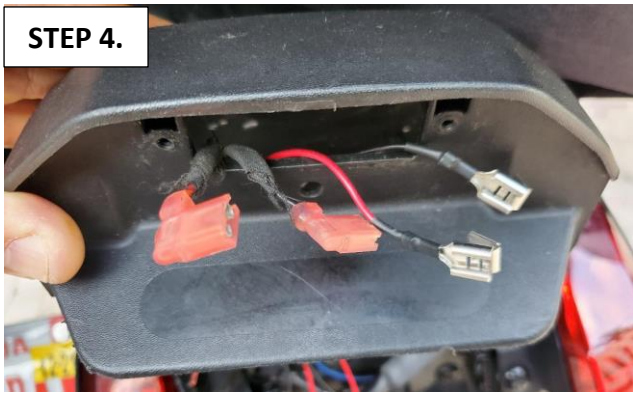


**STEP 4.**

Take the small harness provided in your kit, which has the positive and negative piggyback connectors, and connect the OEM positive and negative female connectors to the male positive and negative connectors of the small harness.


Next attach the female connectors from the piggyback connectors to the OEM license plate LED.



**STEP 5.**  
Reattach the OEM license plate LED to the rear fender trim using the 2 torx screws that you removed in **STEP 3**.

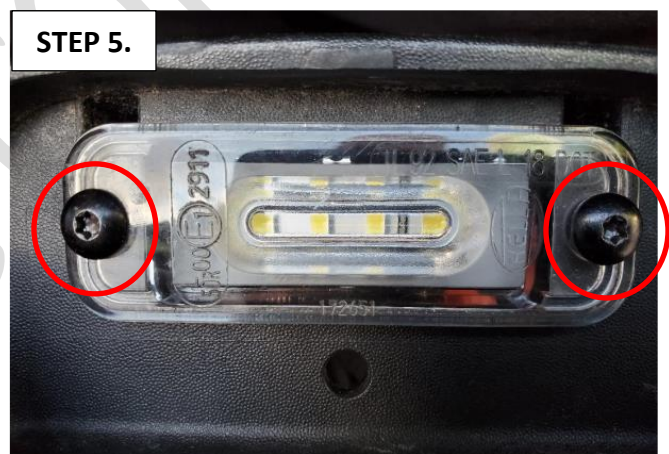


**STEP 5.**

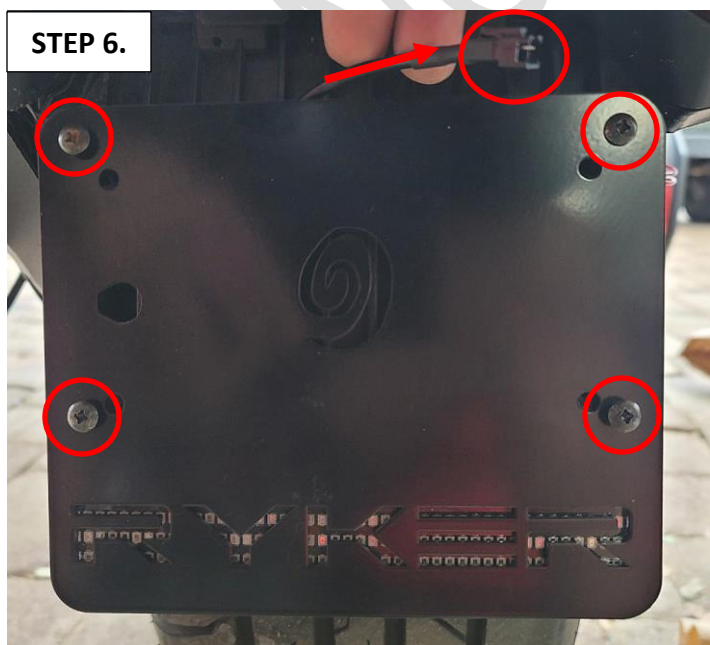

**STEP 6.**

**STEP 6.**  
Before mounting the plate, ensure that the wire with the 2-pin female connector is routed from the top of the mount. Mount the license plate mount to your Ryker with 4 screws that have been provided using the outer holes pre-drilled on the plate.

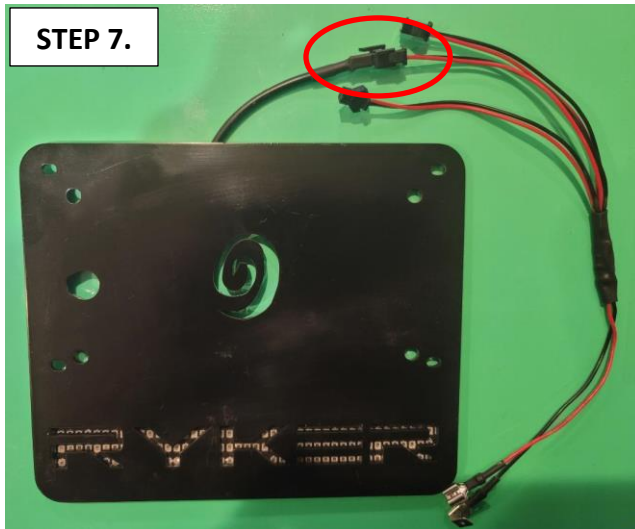

**STEP 7.**

Attach one of the male 2 pin connectors to the female 2 pin connector that comes from the LED attached to the back of the license tag mount.

The other two connectors can be used for available add-on accessories.

Once you have made the connection, make sure all of the wiring is zip tied and stowed away before reinstalling the rear fender trim covered that you removed in **STEP 2**.



**STEP 8.** Use the remaining 4 screws provided in your kit to attached your license tag using the inner holes pre-drilled in on your mounting plate.

Once you have carefully re-installed the fender trim cover, push the START button on your RYKER.

The RYKER LED flag should illuminate vividly!

If the RYKER LED is not lit, refer back to these instructions and repeat the installation process for troubleshooting.

Hypnotic Concepts LLC \* [info@hypnotic-concepts.com](mailto:info@hypnotic-concepts.com) \* 813-658-5774