

Nelson & Nelson Mfg. 5210 Stadium Blvd. Suite C Jonesboro AR 72404 870-268-6393 : Cell 219-1019

Installation Instructions 1-5-23

Model RYKR-FLRB22+

Steps needed to install your 2022 Ryker Rally Driver Floorboards Ryker Rally Model only 2022+ DO NOT USE IMPACT DRILL ON BOLTS OR NUTS.

(Stainless Steel Hardware is Softer Metal and can strip the threads.) You must use lubricant on bolts and nuts to prevent galling. Minimum WD40, preferably Anti-Seize Stainless Steel Lubricant MRO 1000



Complete Kit shown above. For Ryker Rally 2022+ Model Only.


1.- The New Spyder Extras Ryker Floorboard kit is simple to install and is the most comfortable floorboard option on the market. Set at an angel that fits the rider's position. This allows too the floorboard to be tilted up and adjusted as the normal foot peg allowed.

First remove the support footrest off the foot oem foot peg.



2.- Locate the adapter spacer on the peg support as shown below.

Using the holes in the spacer as a guide drill two 5/16" holes on each oem highway peg as shown below in this exact position. This hole location is based on the Spacer block as shown below. This block follows the configuration of the oem support foot peg once the actual lines up with the floorboard mount holes

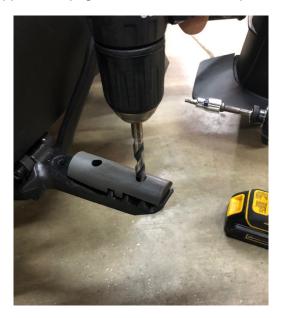

2.- Once both holes are dilled take the Floorboard support mount as shown below and locate on mount over the spacer on the foot peg. Take the two 5/16" Socket Head Bolts and place the floorboard main support over the footrest and take the mount lock plate flat side up and mount it from the bottom as shown below. Screw the bolts down evenly through the mount then the footrest into the mount lock plate. Tighten down evenly through the lock plate then add the safety locknuts as shown below.



3.- Take the floorboard plate with the letter R facing outwards and the two button heads screws and screw the floorboard plate down. Do the same for the opposite side.

Your Floorboards are now installed. These floorboards allow full adjustment of your existing OEM pegs.

4.-Once Installed do not stand on the rear of the Floorboards. Stand over the peg location only!

