

# F3 AFTERBURNERZ 2015+



- Contents
- (2) 15" LED bottom section
  - (2) 17" LED top section
  - 3 pin OEM connector
  - 1:4 splitter
  - Alcohol, primer



Remove license plate.



Using a Torx10 bit, remove screw to open the rear covering to reveal the 3 pin OEM harness.



Showing: 3 pin OEM harness that we will be plugging into with the supplied harness.




Loosen and remove 4 bolts that hold the fender bracket.



Once all 4 bolts are removed, swing out the fender to the right to reveal the inner back of the fender. Wires will be attached to right side.



Using 8mm socket, remove these 7 screws and remove the outer plastic license plate cover.

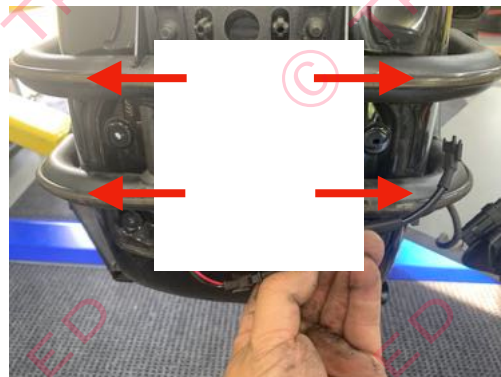

Clean the 4 round support arm on each side with alcohol and let dry before applying primer.



Start by using the longest strip on each side of the top bar. Then short strip on lower bar (See above). All wires exit to the center of the fender. Don't stretch the LED strips.






Connect all 4 strips to the 1:4 splitter



Connect 1:4 splitter to OEM 3 pin harness provided and connect it to rear fender 3-pin harness inline.

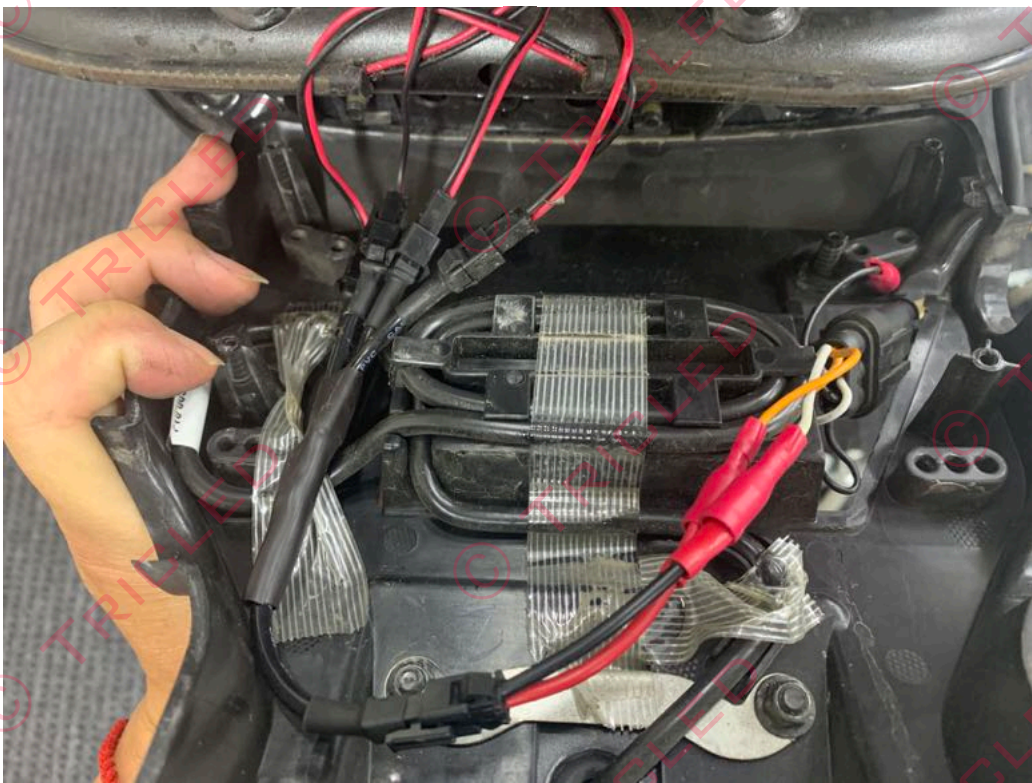

Test LED by turning the key to the on position

Be sure to organize the wires and splitter so they won't be in the way/ get pinched when assembling the back piece together. Be sure no wires are in front of the bolt holes.

