

CAN AM SPYDER RT 2010-2019 BRAKE FLASHER MODULE




Your contents.

2 OEM harness with preinstalled brake flasher module.



1. Start by opening both saddle bags and top rear trunk. Remove the two T30 Torx head screws on each side.

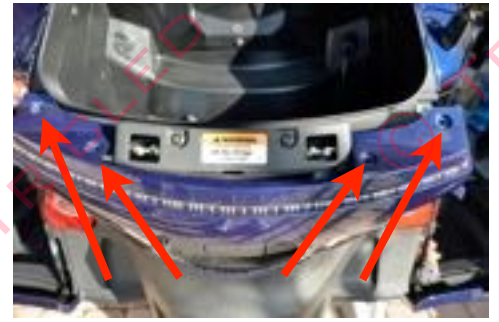

2. On the top rear trunk remove (4) bolts T30 Torx head.



3 Remove the 3 bolts that hold the bottom black plastic.



4 Remove shock from the top and remove the 2 bolts behind shock.



5. Remove rear top fairing.



6. remove the (3) bolt from the light housing and remove taillight to reveal the 5 pin harness. Attach one side of the flasher module here. Repeat for other side. (Does not matter which side)



Disconnect the tail light harness from the Spyder and connect the brake flasher modulator to the Spyder's OEM Harness then reconnect the tail light.

Turn the ignition key to the acc position and press on the brake to test.

FYI ON BRAKE FLASHER

Our brake flasher will work with any TricLed brake LED's. When connecting be sure to daisy chain everything with brake modulator attached first to the bike, all LED's and the factory tail light last.