

STEALTH™ Heat Extractor




Remove faux OEM louver. Unscrew, then carefully pry tabs out of slots from under the hood.

Installing your NEW Heat Extractor:

1. With the hood raised, center the Heat Extractor in position.

(Do NOT over tighten lock nuts on attaching screws!)


2. Insert (4) screws into clear plastic washers, using the (8) flat washers, one above & one below (4) attachment points. (See drawing) Snug screws and nuts only until the flat washers will not wiggle behind the lock nuts. Overtightening will distort the Heat Extractor.

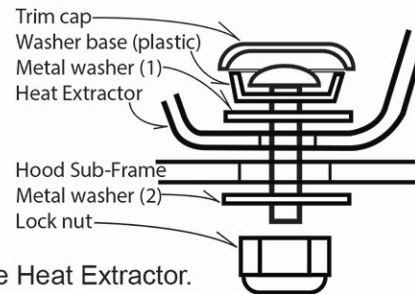

3. Firmly snap black trim caps over plastic washers, covering screw heads.

Hardware Included with ABS Slingshot Heat Extractor

4 #8-32 screws @ 3/4" long



4 #8-32 lock nuts



8 3/16 ID flat washers



4 Pairs (trim) black cap & washer base sets



PARAMOUNT PLASTICS INC

www.paramountplastics.com 2810 Jeanwood Dr, Elkhart, IN



Packaged by	Date:
Checked by	Date: