


SLINGSHOT MANUAL BRAKE SWITCH

Contents

Brake switch with Oem connector.

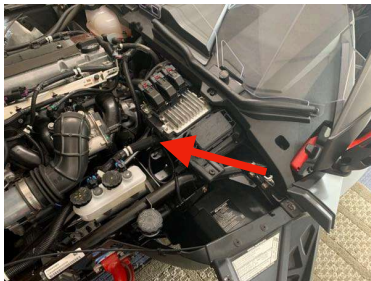

Locate the factory magnetic switch bracket under the front hood in front of the drivers firewall. Prior to removing the 10mm bolt on the bracket, have someone push the brake pedal to the floor back and forth so you can observe the lever action on the magnetic switch. When installing the manual switch, the pedal action has to be the same but instead of going through the magnetic switch it will make contact with the switch. The slot on the bracket and the 10mm bolt will allow adjustment to the switch forward or back to ensure brake light contact.



Locate the wire that is attached to the magnetic switch and disconnect it from the factory harness. You will connect the new brake switch to this same OEM connector.



Once the new manual switch is mounted, be sure to tighten down the 10mm bolt and have someone push the brake pedal again to ensure contact when the brake is pressed down to engage the switch. Make fine adjustment to ensure it makes contact and the rear brake light is working properly. When the brake pedal hits the red switch the brake lights are activated.