



## Slingshot Sway Bar Mounts



Installation time of the Sway Bar Mounts depends on you and your mechanical skills. It is suggested that you read through the directions a few times to familiarize yourself with the components of the kit, and your car.

If you are pretty handy with tools the Sway Bar Mounts can be installed in 30 minutes, however we suggest that you schedule at least a couple of hours for the installation.

If you have any questions during the installation you can call us at (864) 907-6004 or email us at [Tech@ddmworks.com](mailto:Tech@ddmworks.com).

### TOOLS NEEDED

6mm Allen Key
13mm socket
Grease



119-A Hwy 183  
Piedmont, SC 29673

**Tech Support**  
(864) 907-6004  
[Tech@DDMWorks.com](mailto:Tech@DDMWorks.com)

Rev A 5-6-15 ZPS



## Removing the Stock Sway bar mounts

1. **Make sure your Slingshot is in neutral and the parking brake is on before starting installation.**
2. You can start on either side of the Slingshot but it is recommended you do one mount at a time.
3. Using a 13mm socket wrench remove the 2 bolts holding the Stock sway bar mount onto the frame. You will NOT be re using these bolts.
4. The stock mount and bushing will now come off easily. The stock bushing comes apart in two pieces.



## Installing The DDMWorks Sway Bar Mounts

1. Using your grease, lube up the new bushing on the inside and outside.
2. Gently separate the new bushing at its opening and slip it over your sway bar.
3. Now, paying attention to the bolt holes on the DDMWorks sway bar mount, slide the mount over the bushing and sway bar.
4. The new mount should sit flush with the frame of the slingshot with the bolt holes lined up.
5. Using your 6mm allen wrench tighten down the two socket head bolts supplied in the sway bar mount kit.
6. With one side done you can now proceed to the next side of the sway bar and repeat the same process.

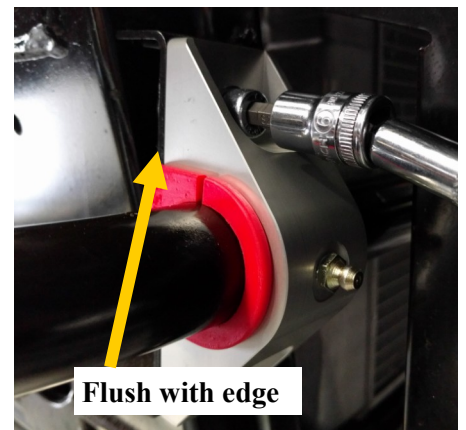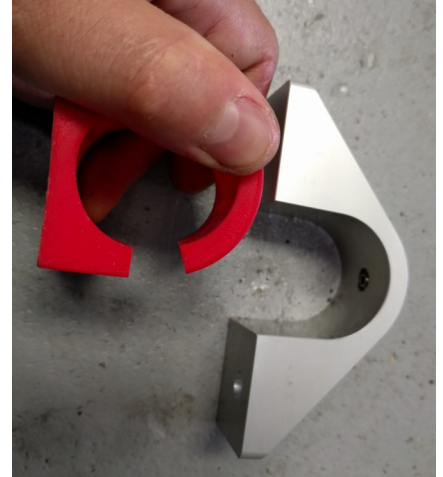

**Congratulations!** You have finished the install. All of us here at DDMWorks thank you for your purchase and hope you enjoy your new sway bar mounts.

**If you have any questions feel free to give us a call or text us at 864-907-6004. You can also email us at [Tech@ddmworks.com](mailto:Tech@ddmworks.com).**

Also, Follow us on Facebook for the latest product and information releases!



119-A Hwy 183  
Piedmont, SC 29673  
**Tech Support**  
(864) 907-6004  
[Tech@DDMWorks.com](mailto:Tech@DDMWorks.com)

Rev A 5-6-15 ZPS