


Black Fairing Panels Kit for Can-Am Ryker

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

This BLACK FAIRING PANELS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

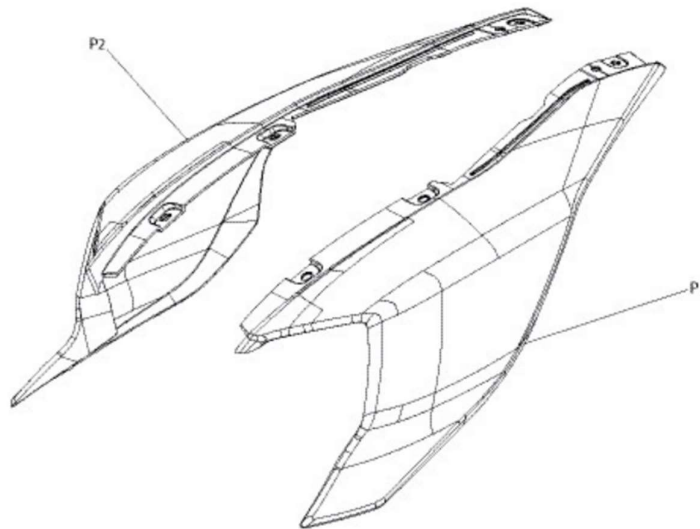


INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Open the glove box cover and the fuel filler door.

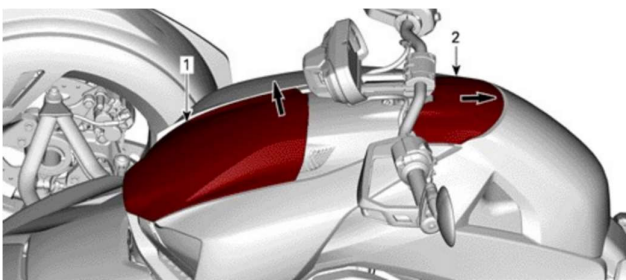

3. On the left side of vehicle, remove and keep the four (4) plastic rivets.

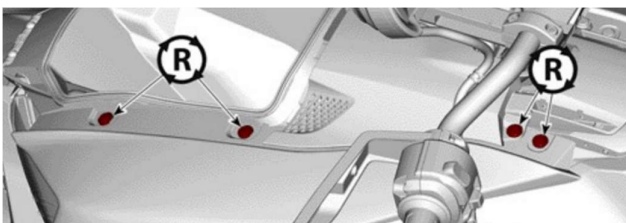

4. On the left side of the vehicle, remove the vehicle side fairing by pulling the bottom front corner and rotating the side fairing. Keep the side fairing for further use.



5. Repeat steps 3 and 4 on the right side of the vehicle.