



Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72404
870-268-6393 : Cell 219-1019

Installation Instructions 3-1-23
Model SRT20+LRUSB
Model SRT20+RUSB

Rear Dual USB KIT ALL 2020+RT MODELS

Steps needed to install your Rear Dual USB kit.

Note: If you feel you are not qualified to install this product, please see your local dealer.




1.- On the 2020+ Limited you have USB outlets in the trunk. The demand for USB outlets for the passenger riding led to this new product.

First remove the driver backrest if you have one and then raise the driver seat and underneath release the clips on each side to remove the passenger seat. Once the seat is removed open the trunk. Remove the two screws holding the passenger backrest in place. Then remove the backrest. This will expose the OEM USB outlet below.




2.-Take the new USB mount and remove the factory screw as shown below. With the new screw provided place the new USB mount as shown below. The mount bracket has a cross bar that rest against the panel of the spyder as shown. Tighten down the screw.

Route the wire to the upper OEM USB outlet and plug the existing USB wires into the yellow terminals then connect the blue terminals to the OEM Positive and Negative terminals of the existing USB outlet. Reinstall the backrest and passenger seat.

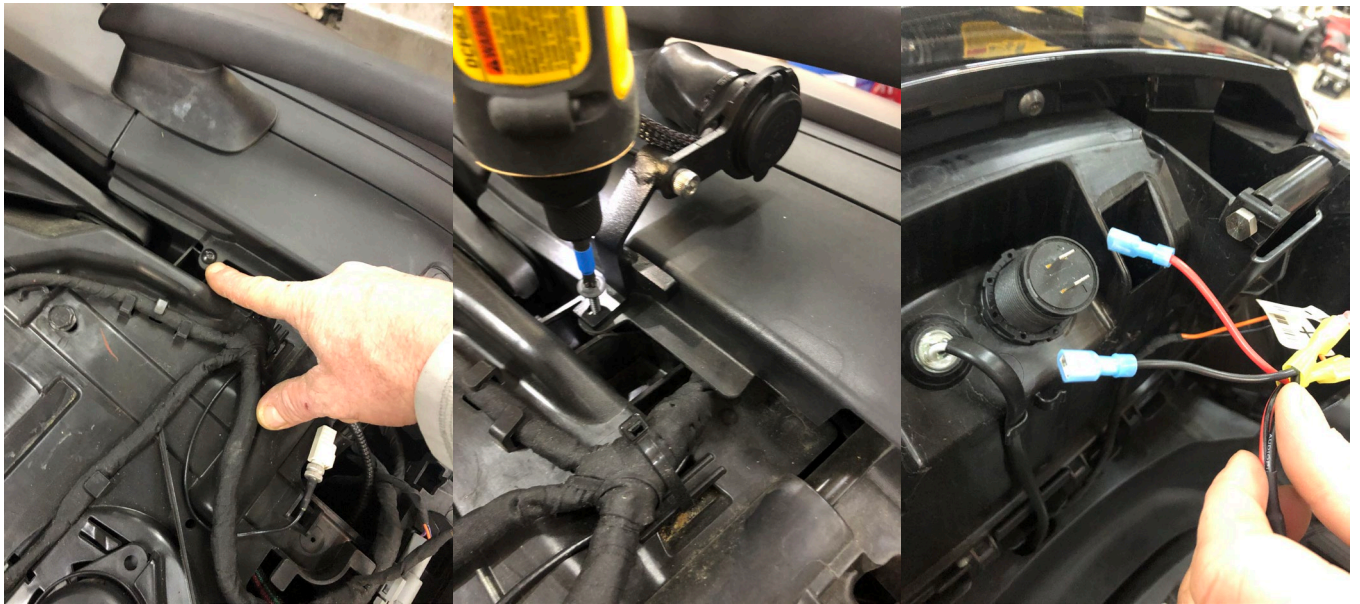

3.- On the Spyder 2020+RT base model with no trunk you will use the wire harness adapter plug shown below for this kit. Once you remove the passenger seat as discussed above, locate the factory harness and plug the adapter into the OEM harness. Then take the positive and negative wires from plug and plug those into the yellow terminals making sure to match red to red / black to black.

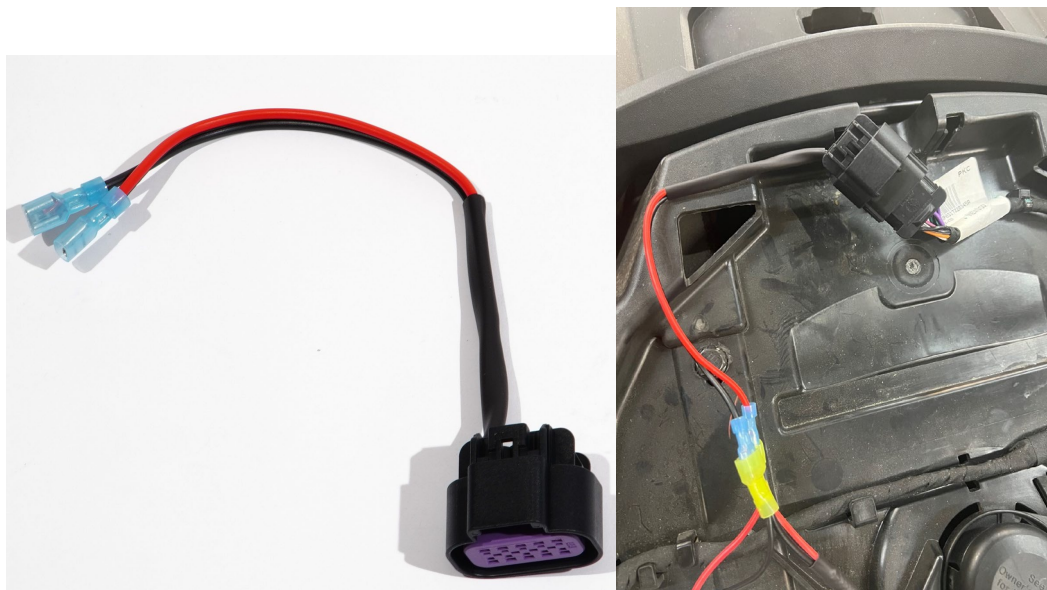

Your NEW rear passenger USB outlet is now installed!

We thank you for purchasing our 2020+ RT Rear Passenger USB Kit. Today we know the needs for accessories that provide a higher level of comfort while riding and we have solved that demand with a stylish system that compliments the design of your Spyder@!