## **CAN-AM RYKER Adjustable Water Bottle Bracket Installation Instructions**

\*\*Please read thoroughly before proceeding with installation in order to ensure proper fit & functionality\*\*

#### **TOOLS NEEDED:**

T30 torx screwdriver

- (1) 10mm wrench
- (1) 4mm Allen wrench

#### **PARTS LIST:**

(1) powder coated aluminum bracket w/ mounting hardware(1) water bottle holder


#### STEP 1.



Remove two CVT (Continuously Variable Transmission) cover screws with a T30 torx from the throttle side of your Ryker.

\*You will be reusing these screws \*

### STEP 2.

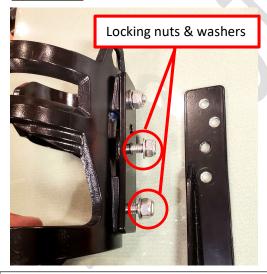





Remove both 6mm locking nuts and washers from the back of the water bottle holder bracket.

There are 2 positions that the water bottle holder can be installed. Before attaching the water bottle holder to the main bracket, chose the position you will like to use.

Attach the washer and locking nut to the screws and tighten just enough to hold the water bottle in place

**DO NOT TIGHTEN DOWN!** 





With your T30 torx wrench, use the two CVT (Continuously Variable Transmission) cover screws that you removed in STEP 1 to secure the water bottle bracket to the CVT cover. Slowly tighten the torx screws but be careful not to OVERTIGHTEN.

# \*\*DO NOT OVERTIGHTEN THE TORX SCREW! \*\*









The final step is to tighten the locking nuts installed in STEP 2. Use a 4mm Allen wrench to hold the m6 bolt in place and a 10mm wrench to slowly turn and tighten the locking nuts located on the back of the water bottle bracket until the water bottle holder is secure but be cautious not to **OVERTIGHTEN!**Overtightening may result in cracking the water bottle holder and not covered in your warranty.

\*\*INSTALLATION IS COMPLETE\*\*

HYPNOTIC CONCEPTS LLC

INFO@HYPNOTIC-CONCEPTS.COM

813-658-5774